


With new I-Catcher systems produced since June 2020 the way the I-Catcher display system can be changed from Auto to Usermode and backwards is changed. The I-Control manuals refer to another manual that explains this.

Below a description on how to adjust the system mode.

The button combination for activation of the I-Control mode depends on the Sign Controller ID. For ID 1, press ◀ and ▶ at the same time for at least two seconds. For ID 2, the combination is ◀ and ▼. For ID 3, the combination is ▶ and ▲.

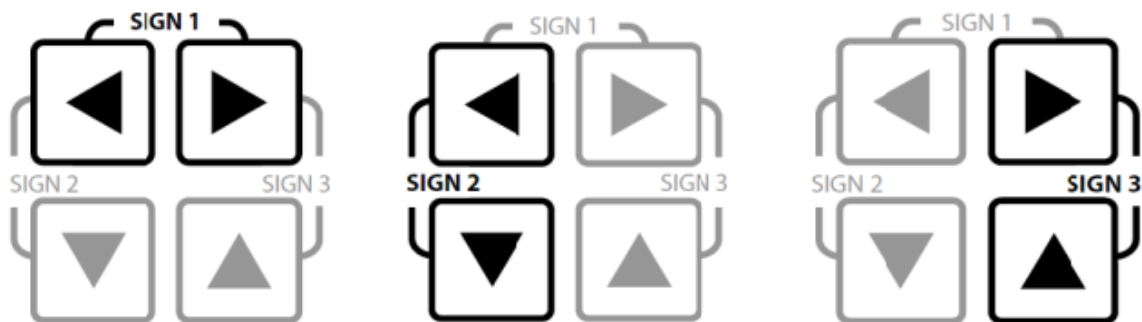

Depending on the setting the first display in the system will now show 'Auto' or 'User'. This indicates the current active mode of the system

Press ▼ and ▲ at the same time for at least two seconds. The first display in the system will now show 'test'.

Press within 5 seconds the ▲ or ▼ button to go to the 'set' menu. The first display in the system will now show 'Set'.

Press within 5 seconds the ▶ key to activate the set mode. The first display will now show 'S01'.

Press within 5 seconds the ▶ key to go in to 'S01'.

Press within 5 seconds the ▲ or ▼ button to toggle between 'Auto' and 'User'.

Press within 5 seconds the ▶ key to confirm the new selected mode.

Wait for about 10 seconds and the prices on the displays will re-appear again and the system mode has changed.

NOTE: Do not go into any other Set modes. You may accidentally adjust settings causing the system to fail normal operation!